



## Instructions for Safe Use of the ERGONOMIC WORKER SEAT



Do not use this product as a stepladder or any other purpose than chair. The chair may fall causing injury and damage.



The seat can be removed and adjusted to the desired height. Be careful not to drop seat when adjusting.



 
Do not place your fingers and hands when you handle the chair. You may catch your fingers and hands in these moving areas causing injury.



Do not place any objects, especially hot liquids, on the seat of the chair. The seat may move causing the object to fall, leading to possible injury and burns.

- Do not use this chair in an unstable position such as leaning while seated. It may fall down causing injury and damage.
- If you use this chair on floor, it may cause damage scratching the floor. Place a rug or mat under the chair to prevent damage and scratching to the floor. The leg caps can wear. If you see any cracking or damage to the leg caps, replace them.  
(Please purchase replacement parts at the store where purchased.)
- Incorrect operation or inappropriate use of the chair might cause bodily injury or damage. Be careful when allowing children to use the chair.

## Instructions to Adjust Seat Height and Fold Chair

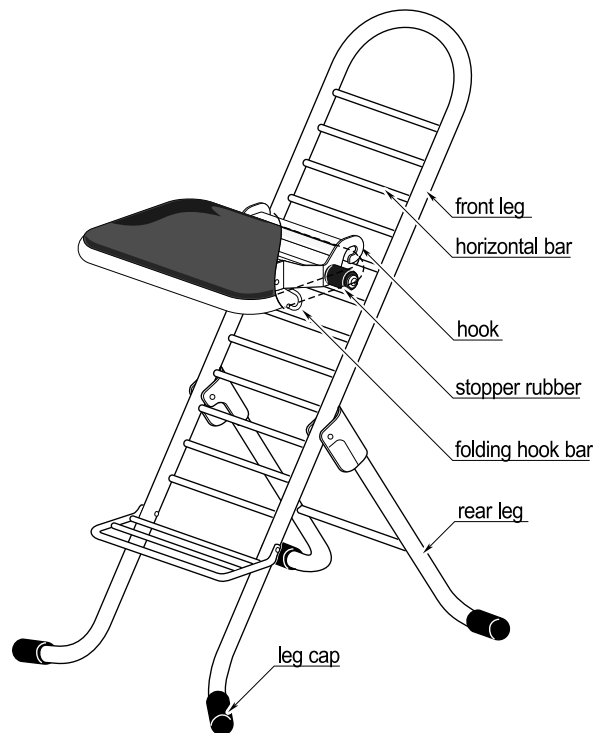


**To adjust seat height,** hang both right and left hooks on the horizontal bar located on the main frame. Make sure that both right and left stopper rubbers are positioned against the main frame.

**To fold chair,** pull out the hook bar on the underside of seat and hang on horizontal bar of chair and fold rear leg to frame.


## Instructions to adjust tilting range of seat

 Tilting range can be adjusted in 2 levels.  
When the chair is shipped, the seat is adjusted in level [A].  
[A]=wide tilting range The distance from rear cushion rubber is short.  
[B]=small tilting range The distance from rear cushion rubber is long.

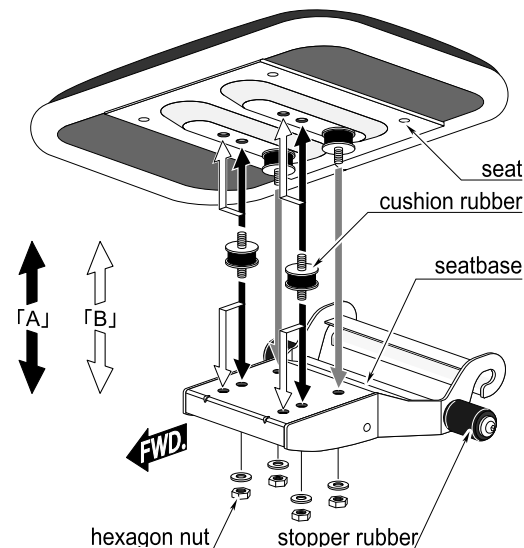

1. Remove the four hexagon nuts located on the underside of seat. This allows separation of the seat and the seat-base. When unscrewing nuts, hold the cushion rubber with a spanner to prevent the cushion rubber rotating.
2. Unscrew the 2 front cushion rubbers anti-clockwise, and remove them from the seat.
3. Replace the cushion rubbers to the desired position [A] or [B], and screw in the cushion rubbers.
4. Screw in the hexagon nuts to secure the seat on the seat-base. When screwing in hexagon nuts, hold the cushion rubber with a spanner to prevent the cushion rubber distorting.

 
The leg caps, stopper rubbers and cushion rubbers can wear. If you see any cracking or damage to them, replace them in a set for each.  
(Please purchase replacement parts at the store where purchased.)



leg cap  
4 pcs./set



 stopper rubber  
2 pcs./set



cushion rubber  
4 pcs./set

## LIMITED WARRANTY

Vestil Manufacturing Corporation (“Vestil”) warrants this product to be free of defects in material and workmanship during the warranty period. *Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.*

### Who may request service?

Only a warrantee may request service. *You are a warrantee if you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.*

### What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

### What is a “proper request”?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail  
Vestil Manufacturing Corporation  
2999 North Wayne Street, PO Box 507  
Angola, IN 46703

Fax  
(260) 665-1339  
Phone  
(260) 665-7586

Email  
sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

### What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following *original* dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions (“wearing parts”): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

### How long is the warranty period?

The warranty period for original components is 30 days. The warranty period begins on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. Vestil may extend the warranty period for products shipped from authorized distributors by *up to 30 days* to account for shipping time.

### If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

### What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
  - Product misuse;
  - Negligent operation or repair;
  - Corrosion or use in corrosive environments;
  - Inadequate or improper maintenance;
  - Damage sustained during shipping;
  - Collisions or other incidental contacts causing damage to the product;
  - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

### Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

