HT-02-1616A INSTRUCTION MANUAL


BASIC DATA:

MODEL	CAPACITY	LOWERED HEIGHT	RAISED HEIGHT	TABLE DIMENSIONS	NET WEIGHT
HT-02-1616A	200LBS.	31"	49"	16" X 16"	62 LBS.

ASSEMBLY INSTRUCTIONS:

- 1. Put the frame with casters on the ground.
- 2. Install hydraulic cylinder on the frame, and secure it with big washer (#24), spring washer (#25) and M12 bolt (#26).
- 3. Remove solid plug on top end of the cylinder and replace it with bleeder (vent) plug to allow air to be bled from the hydraulic system.
- 4. Join the Cylinder joint block (#6) to the lift piston (#(7), and secure them by nut (#7).
- 5. Use spanner to tighten nut (#7) under the table.
- 6. Install push/pull handle (#1) on front side of the table (#5), and secure it by M8 bolt (#4), spring washer (#3) and flat washer (#2).
- 7. Now tighten all bolts & nuts.
- 8. Check all the parts, and then test this lift table with weight and without weight.

HT-02 Post Hydraulic Table

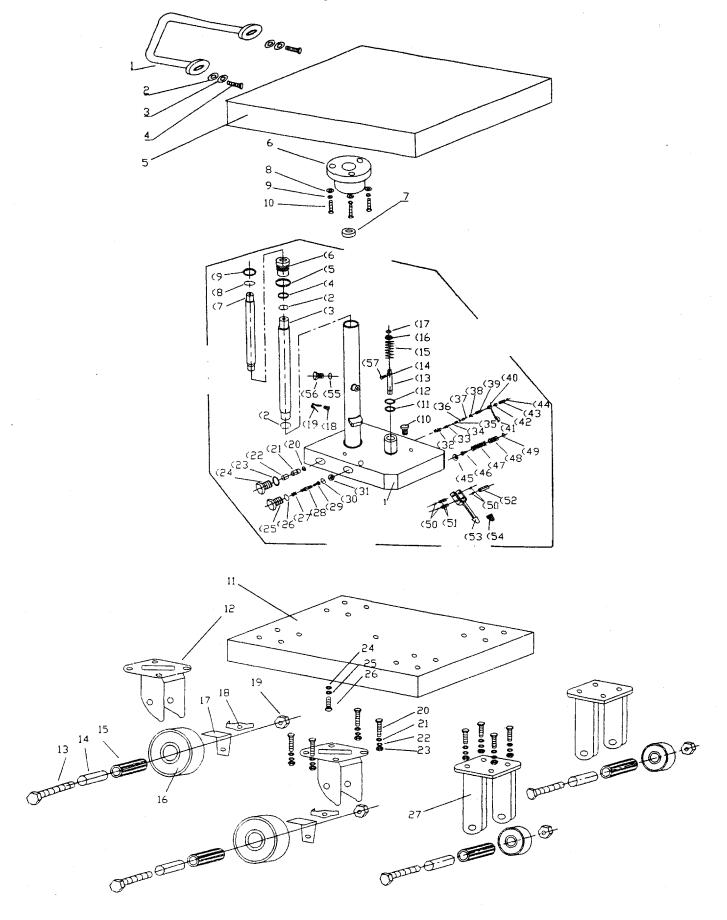

HT-02 Post Hydraulic Table

No.	Description	Q'ty	No.	Description	Q'ty	No.	Description	Q'ty
	Handle	1	(1	Valve	1	(30	O-ring ⊄ 10×1.9	1
2	Flat Washer	2	(2	O-ring 32.5×1.8	2	(31	Steel Ball ⊄7	1
3	Spring Washer	2		Inter Cylinder	1	(32	Spring	1
4	Hex Cap Bolt M8×20	2	-	Dust Cover DH28	1	(33	Push Rod	1
 5	Table	1	(5	O-ring 56×3.5	1	(34	O-ring ⊄ 15×2.4	1
6	Cylinder Joint Bolck	1	(6	Cylinder Cover	1	(35	Push Rod Cover	1
7	Round Nut	1	<u> </u>	Lift Piston	1	(36	Guide Cover	1
8	Flat Washer ⊄ 8	3	(8	O-ring 34×3.5	1	(37	Pin	1
9	Spring Washer ⊄8	3	(9	Dust Cover DH28	1	(38	Spring	1
10	Hex Cap Bolt M8×20	3	(10	Hex Cap Bolt	1	(39	Link Rod	1
11	Frame	1	(11	Oil Seal UHS31.5	1	(40	M6 Bolt	1
12	Swivel Wheel Holder	2	(12	Dust Cover DH31.5	1	(41	Slice	1
13	Hex Cap Bolt	4	(13	Pump Piston	1	(42	Bushing	l
14	Bushing	4	(14	O-ring 28×3.1	1	(43	Bolt	1
15	Bearing	4	(15	Spring	1	(44	Nut	1
16	Wheel	4	(16	Spring Seat	1	(45	Steel Ball ⊄7	1
17	Brake Slice	2	(17	C-ring Ф15	1	(46	Spring Seat	1
18	Brake Foot Pedal	2	(18	Screw M6	1	(47	Spring	1
19	Set Nut	4	(19	Slice	1	(48	Set Screw	1
20	Hex Cap Bolt	16	(20	O-ring 9×1.8	1	(49	O-ring 10×1.9	l
21	Flat Washer	16	(21	Lowering Valve	1	(50	C-ring	4
22	Spring Washer	16	(22	Washer ⊄ 12×8	1	(51	Shaft	2
23	Hex Cap Nut	16	(23	Washer ⊄ 14	1	(52	Press Wheel	1
24	Big Washer	1	(24	Screw Plug M14×1	1	(53	Foot Pedal	1
25	Spring Washer	ı	(25	Set Screw	1	(54	Rubber Cover	1
26	Hex Cap Bolt	1	(26	6 O-ring ⊄ 16×2.4	1	(5:	6 O-ring 10×1.9	1
27	Fixed Wheel Holder	2	(27	7 Spring	1	(50	Air Breather M10×1	1
			(28	3 Valve Core	1	(5'	Hex Cap Plug M4	1
			(29	Valve Cover	1			