HT-10-2036A ASSEMBLY INSTRUCTIONS


BASIC DATA:

MODEL	CAPACITY	LOWERED HEIGHT	RAISED HEIGHT	TABLE DIMENSIONS	NET WEIGHT
HT-10-2036A	1,00LBS.	36"	54"	20" X 36"	187 LBS.

ASSEMBLY INSTRUCTIONS:

- 1. Put the frame on the ground, install outer guide posts (#15), and secure them by M8 bolt (#17), flat washer (#18) and lock nut (#20).
- 2. Install hydraulic cylinder on the frame, and secure it with big washer (#49), spring washer (#50) and M12 bolt (#51).
- 3. Remove solid plug on top end of the cylinder and replace it with bleeder (vent) plug to allow air to be bled from the hydraulic system.
- 4. Lift up the cylinder to $\frac{1}{2}$ " height, join the cylinder joint block (#6) to the lift piston (#(7), and secure them by nut (#7).
- 5. Use spanner to tighten nut (#7) under the table.
- 6. Install inner guide posts (#11) and secure them with M8 bolt (#14), spring washer (#13) and flat washer (#12).
- 7. Install push/pull handle (#1) on front side of the table (#5), and secure it with M8 bolt (#4), spring washer (#3) and flat washer (#2).
- 8. Adjust the verticality of inner guide post (#11) and outer guide post (#15) with the help of M8 bolt (#16).
- 9. Now tighten all bolts & nuts.
- 10. Check all the parts, and then test this lift table with weight and without weight.

HT-10 Post Hydraulic Table

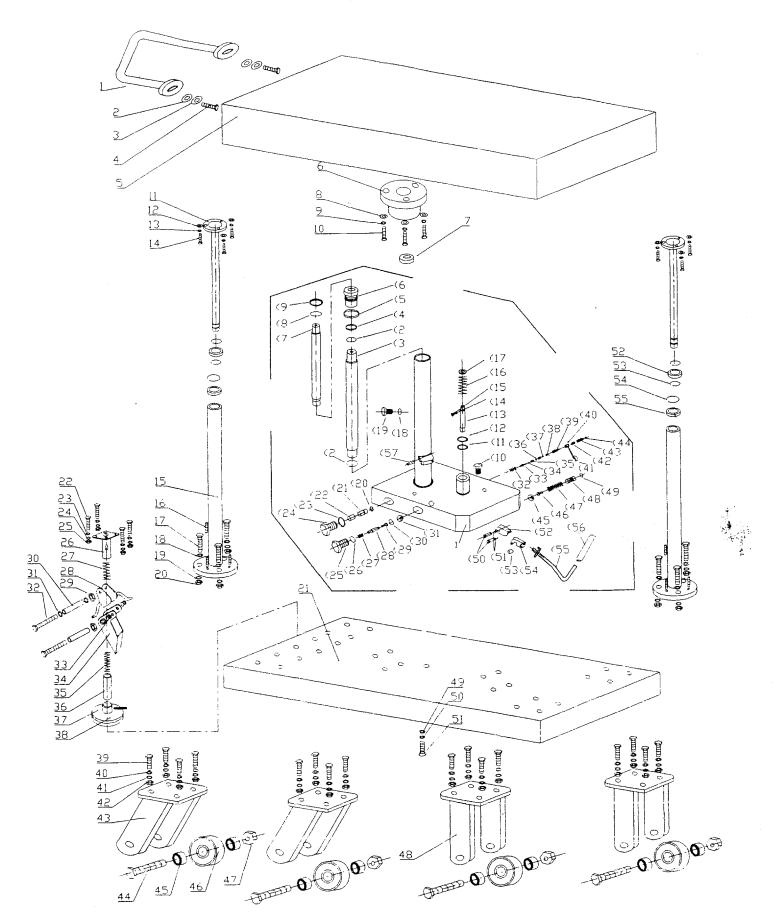

HT-10 Post Hydraulic Table

H1-10 Post Hydraunc Table										
No.	Description	Q'ty	No.	Description	Q'ty	No.	Description	Qʻty		
1	Handle	l	38	Spring Pin ⊄ 8×35	1	(20	O-ring 9×1.8	1		
2	Flat Washer	2	39	Hex Cap Bolt M10×30	16	(21	Lowering Valve	1		
3	Spring Washer	2	40	Flat Washer ⊄ 10	16	(22	Washer ⊄ 12×8	1		
4	Hex Cap Bolt	2	41	Spring Washer ⊄10	16	(23	Washer ⊄ 14	1		
5	Table	1	42	Hex Cap Nut M10	16	(24	Screw Plug M14×1	1		
6	Cylinder Joint Bolck	1	43	Swivel Wheel Holder	2	(25	Set Screw	1		
7	Round Nut	1	44	Hex Cap Bolt	2	(26	O-ring ⊄ 16×2.4	1		
8	Flat Washer ⊄8	3	45	Bearing	8	(27	Spring	1		
9	Spring Washer ⊄8	3	46	Wheel	4	(28	Valve Core	1		
10	Hex Cap Bolt M8×20	3	47	Hex Cap Nut M8	4	(29	Valve Cover	1		
11	Inter Guide Post	2	48	Fixed Wheel Holder	2	(30	O-ring ⊄ 10×1.9	1		
12	Flat Washer	6	49	Big Washer	1	(31	Steel Ball ⊄7	1		
13	Spring Washer	6	50	Spring Washer	1	(32	Spring	1		
14	Hex Cap Bolt M8×20	6	51	Hex Cap Bolt M12×20	1	(33	Push Rod	1		
15	Outer Guide Post	2	52	Separate Cover	2	(34	O-ring ⊄ 15×2.4	1		
16	Set Bolt M8×10	6	53	Steel Wire C-ring	4	(35	Push Rod Cover	1		
17	Hex Cap Bolt M8×35	6	54	Steel Wire C-ring	2	(36	Guide Cover	1		
18	Flat Washer	6	55	Separate Cover	2	(37	Pin	1		
19	Spring Washer	6	(1	Valve	1	(38	Spring	1		
20	Hex Cap Nut	6	(2	O-ring 32.5×1.8	2	(39	Link Rod	1		
21	Frame	1	(3	Inter Cylinder	1	(40	M6 Bolt	1		
22	Hex Cap Bolt M8×20	4	(4	Dust Cover DH28	1	(41	Slice	1		
.23	Flat Washer	4	(5	O-ring 56×3.5	1	(42	Bushing	1		
24	Spring Washer	4	(6	Cylinder Cover	1	(43	Bolt	1		
25	Hex Cap Nut	4	(7	Lift Piston	1	(44	Nut	1		
26	Brake Holder	1	(8	O-ring 34×3.5	1	(45	Steel Ball ⊄7	1		
27	Spring	1	(9	Dust Cover DH28	1	(46	Spring Seat	1		
28	Wave Arm	1	(10	Hex Cap Bolt	1	(47	Spring	1		
29	Set Nut M8	1	(11	Oil Seal UHS31.5	1	(48	Set Screw	1		
30	Pipe Cover	2	(12	Dust Cover DH31.5	1	(49	O-ring 10×1.9	1		
31	Flat Washer	4	(13	Pump Piston	1	(50	Shaft	2		
32	Hex Cap Bolt M8×55	2	(14	Compose Washer ⊄ 4	1	(51	C-ring	2		
33	Screw ⊄8	2	(15	Hex Cap Plug ⊄4	1	(52	Rotate Block	1		
34	Foot Pedal	1	(16	Spring Seat	1	(53	Press Wheel	1		
35	Spring	1	(17	C-ring ⊄ 15	1	(54	Press Wheel Seat	1		
36	Center Pipe	1	(18	O-ring ⊄ 11×1.9	l	(55	Foot Pedal Rod	1		
37	Control Slice	1	(19	Hex Cap Plug M10×1	1	(56	Foot Pedal Cover	ı		