

LOW HEADROOM TROLLEYS



CHOOSE FROM THE RANGE OF BISON LOW HEADROOM TROLLEYS. MINIMIZE THE LOST HEADROOM BETWEEN THE BEAM FLANGE & THE TROLLEY SUSPENSION POINT.




QUICK INSTALLATION

USING A DRILL & THE ALLEN BIT, SIMPLY TIGHEN OR LOOSEN THE SHAFT TO FIT THE TROLLEY TO A BEAM.



INCLUDED

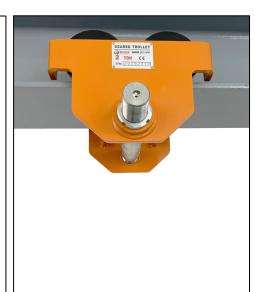

FITS WIDER FLANGE BEAMS

AVAILABLE IN PLAIN & GEARED TROLLEYS

QUICK INSTALL ALLEN BIT SHAFT

INCLUDES ALLEN BIT & SHAFT LOCKING NUTS

